Cryolar™ NXT 91-30

Product Data Sheet

PROPERTIES

COLOR:
Black

SERVICE TEMPERATURE:
Temperature at tape surface.
-270°F to 250°F (-167°C to 120°C)

Use of Foster® 52-15 Cryogenic Metal Primer is required on metal surfaces subject to temperatures below -75°F (-60°C)

APPLICATION TEMPERATURE (TYPICAL):
40°F to 115°F (4°C to 46°C)

STANDARD ROLL SIZE:
5-in. width x 25-ft. length (12.7 cm x 7.6 m)

TOTAL THICKNESS:
30 +/- 4 mils (0.8 +/- 0.1 mm) nominal without release liner

AVERAGE NON-VOLATILE (ASTM D2369):
~100% by weight

WATER VAPOR PERMEANCE (TYPICAL AVERAGE):
ASTM F1249: <0.01 perms (<0.0066 metric perms) when tested at 100°F (38°C) and 90% RH

COMBUSTIBILITY (DRY):
Combustible

LIMITATIONS:
Do not apply to damp, frosty or contaminated surfaces.

For applications to metal pipes or surfaces that will be operating below -75°F (-60°C) use of Foster® 52-15 Primer or a thin film of Foster® 90-61 as a primer is required.

Not for use with plastic, ABS, CPVC, polycarbonate or other piping materials susceptible to environmental stress cracking from contact with oils and plasticizers.

Not intended for long term direct exposure to UV. If it will be exposed for more than 30 days, cover to prevent direct sun exposure.

For application by skilled professionals only.

STORAGE:
Store below 100°F (38°C) out of direct sunlight for extended periods. Short term field storage, keep covered or in ventilated container.

For cold weather applications, store above 60°F (15°C) for 24 hours before use for best results.

™ Trademark of H.B. Fuller Construction Products Inc.

Visit us on the web at www.fosterproducts.com

VAPOR STOP TAPE

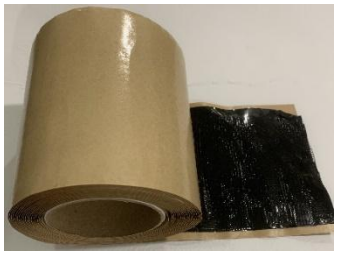

FOSTER® CRYOLAR™ NXT is a self-adhering, low permeance, double-sided, internally reinforced tape used to create vapor stops and dams in cold and cryogenic thermal insulation systems. It is comprised of a proprietary butyl formulation with suitability for exposure to cryogenic temperatures. When applied, overlaps of the tape are self-fusing, creating a single, monolithic, film from the internal pipe or equipment surface to the outer surface of the insulation.

CRYOLAR™ NXT is supplied in rolls on a two-way removable release liner. The internally reinforced film allows for trimming and handling to cut to length and to fit complex vapor stop configurations. The unique, 100% solids, tape film allows for fast, easy application without any need to wait overnight or for evaporation of solvents. Adjacent and abutting insulation and vapor retarder finishes and membranes can be installed immediately after the installation of the vapor stop is complete allowing contractors increased efficiency in installations.

When applied, overlaps of the tape fuse to create a single monolithic film and avoid creation of a sandwich effect that may leave pathways for moisture migration or experience delamination between layers when exposed to cryogenic temperatures.

CRYOLAR™ NXT is compatible with most types of thermal insulation including cellular glass, polyurethane, polyisocyanurate, phenolic, polystyrene, faced fiberglass and aerogels and rubber foam. It is also compatible with stainless steel, aluminum and carbon steel.

CRYOLAR™ NXT may be used on indoor and outdoor applications without concern for flammable solvents or solvent odors and may be used on all thermal insulation systems such as commercial chilled water or industrial cryogenic LNG, ammonia, ethylene and propylene cracker systems.

HB Fuller Construction Products Inc.

6107 Industrial Way ○ Houston, TX 77011 ○ 833-849-3700

APPLICATION GUIDE
FOR
FOSTER® CRYOLAR™ NXT VAPOR STOP TAPE
91-30

PREPARATION
Insulation must be installed and properly secured in place per insulation manufactures instructions. Remove any loose insulation, dust or other contaminants from the surface. Fill any gaps between the insulation and pipe or layers of insulation with mineral fiber insulation flush with the insulation surface.

Ensure insulation is dry and free of frost or condensation. To improve adhesion to dusty insulation surfaces, they may be primed with Foster® 85-45 Fos-Stik™ Adhesive (where operating surface temperature will not be below -40°C) or Foster® 52-15 Cryogenic Metal Primer or a thin film of Foster® 90-61 Cryolar™ Vapor Stop Sealant (where the surface temperature may operate below -40°C).

If the surface of the pipe or other coated metal surfaces will be exposed to operating temperatures below -75°F (-60°C), they must first be primed with Foster® 52-15 Cryogenic Metal Primer or a thin coat (~400 sq ft/gallon) of Foster® 90-61 Cryolar™ Vapor Stop Sealant. Allow the primer coat to dry until set (1-4 hours depending on ambient conditions) before applying Cryolar™ NXT tape.

APPLICATION
The following instructions cover the application style for the majority of vapor stop installations. The vapor dam method gives further instructions for applying the tape at insulation terminations. In both application methods, the tape will be applied to the pipe under the insulation bore. Follow the separate installation guide for vapor dam installation if desirable.

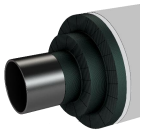
Vapor Stop Style Installation

Vapor Dam Style Installation

Determine the termination point of the inner layer of insulation and mark the pipe accordingly. Using a 5” (12.7 cm) wide piece of tape, apply the tape to the pipe so that 2.5” (6.3 cm) will be under the bore of the insulation and the remaining 2.5” (6.3 cm) will extend past the butt end of the inner layer of insulation.

After the tape has been applied to the pipe, start with the outermost layer of insulation and work on one layer of insulation at a time. Ensure the total width of the tape is sufficient to allow for a 2” (5 cm) overlap on the outer insulation surface + the thickness of the insulation layer + 1” (2.5 cm) to extend onto the next lower insulation layer or to the pipe. [Example: for a 2” (5 cm) thick insulation, the total width of the tape film shall be 5” (12.7 cm) to cover 2” (5 cm) on the insulation surface + 2” (5 cm) butt end of the insulation + 1” (2.5 cm) onto the next layer of insulation]. Cryolar™ NXT tape may be trimmed for narrower width or two pieces may be fused together with a 1” (2.5 cm) overlap to create a wider tape film as necessary.

Leaving the release liner in place, cut a piece of tape long enough to wrap around the outer circumference of the insulation plus 1 – 2” (2.5 – 5 cm) for overlap. OR for larger diameter pipes or complex configurations, two or more lengths of tape may be used and then fused together end to end with 1” (2.5 cm) overlaps to reach around the entire circumference.

Leaving the release liner in place, begin by wrapping the tape around the outer insulation surface with 2” (5 cm) of the tape width onto the insulation smoothing the tape to the surface with hand pressure or a squeegee leaving the rest of the width to overhang the edge. Continue around the circumference of the insulation before overlapping the starting edge by peeling back the release liner to expose the starting point and allow a minimum 1” (2.5 cm) overlap to fuse together.

Next, using a sharp scissors, cut tabs in the overhanging tape from the outer edge until about 1/8” (3 mm) from the insulation. The tabs will allow the tape to overlap on itself without creating wrinkles when pressed onto the butt end of the insulation and onto the next inner layer. When pressed together, the overlaps fuse to create a monolithic film. The tabs should be approximately 1” (2.5 cm) wide depending on the insulation circumference. Narrower tabs may be used on smaller diameter insulation and wider tabs on larger diameter insulation. The tab width can be determined by the applicator to minimize wrinkling of the tape as it is smoothed together. Leaving the release liner over the tab, begin by pressing the first tab over the insulation edge, down onto the butt end of the insulation, tightly into the corner with the inner layer and then onto the inner layer surface. Ensure the tape is tight into the corner before pressing down the inner portion of the tape. Use a plastic squeegee, trowel or putty knife to help press the tape in the corner. The tape should extend approximately 1” (2.5 cm) onto the inner surface. Once the tab is pressed in place, peel back the release liner. Press the next adjacent tab down over the edge onto the insulation butt end and overlapping the previous tab following the same procedure. Continue to work around the circumference of the insulation one tab at a time ensuring the tabs overlap each other and fuse to form a wrinkle free film.

Depending on the width of the step down of the next layer of insulation, a strip of tape may be used to cover the circumference of the insulation ensuring it covers the tabs from the previous layer of tape, OR if the width of the step down is 2” or less, the next layer of tape may be used to cover the circumference and tabs leaving enough overhang to cover the butt end of the inner insulation layer.

Follow the same process as above until each layer of insulation is covered with all overlaps and tabs fused to create a continuous film from the outer insulation surface all the way to the pipe. Then apply a final 2” (5 cm) strip around the pipe to cover the final tabs and create a final seal to the pipe. This application will create a single monolithic tape film without any holes or gaps.

Carefully inspect the entire surface to ensure no gaps were left. If any gaps are discovered, apply a strip of Cryolar™ NXT tape to cover the gap ensuring a 1” (2.5 cm) overlap all around.

Once the application is complete, adjacent insulation and vapor retarder membranes or finishes may be applied without further delay. Joint sealant shall be used to complete the seal on the outer layer of the adjacent insulation and the Cryolar™ NXT tape in accordance with the specification.

Repair damaged Cryolar™ NXT tape by patching it with new tape overlapping the existing tape by a minimum of 1” (2.5 cm) all the way around the repaired area. The surface of the existing tape must be clean and free of contaminants that may interfere with fusing of the repair tape.

CUSTOMER SERVICE: 833-849-3700

IMPORTANT: H.B. Fuller Construction Products Inc. warrants that each of its products will be manufactured in accordance with the specifications in effect on the date of manufacture. WE MAKE NO OTHER WARRANTIES AND EXPRESSLY DISCLAIM ANY WARRANTIES OF MERCHANTIBILITY OR FITNESS FOR A PARTICULAR PURPOSE. If a product fails to meet this limited warranty, purchaser’s sole and exclusive remedy is replacement of the product or, at our option, refund of the purchase price. OUR ACCEPTANCE OF ANY ORDERS FOR THE PRODUCT IS EXPRESSLY CONDITIONAL UPON PURCHASER’S ASSENT TO THE TERMS ON THE APPLICABLE INVOICE.

ADEQUATE TESTS: The information contained herein we believe is correct to the best of our knowledge and tests. The recommendations and suggestions herein are made without guarantee or representation as to results. We recommend that adequate tests be performed by you to determine if this product meets all of your requirements. The warranted shelf life of our products is twelve months from date of shipment to the original purchaser or as otherwise provided on the certificate of analysis.

For professional use only. Keep out of reach of children.